


PLAYMATE FREEDOM KIT

Owner's Manual

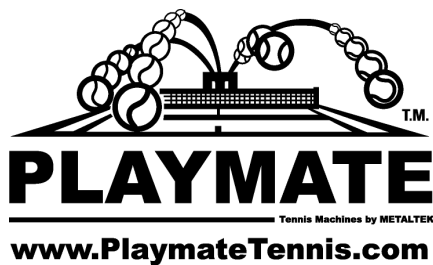

METALTEK

455 Kitty Hawk Drive
Morrisville, NC 27560

Tel: (919) 544-0344

Fax: (919) 544-1430

www.PlaymateTennis.com

Serial#: _____

PLAYMATE FREEDOM KIT

Copyright © 2010 by METALTEK

All rights reserved. This document is supplied to the user with the understanding that no part of the contents may be reproduced or transmitted in any form or by any means without the express written permission of METALTEK.

METALTEK has attempted to ensure that the information included in this document was accurate and correct at the time of printing. METALTEK cannot be held accountable for typographical errors or mistakes. The information in this document is subject to change without notice.

Disclaimer

Information in this document is subject to change without notice and does not represent a commitment on the part of METALTEK.

METALTEK provides this document “as is”, without warranty of any kind, either expressed or implied, including, but not limited to, the particular purpose. METALTEK reserves the right to make improvements and/or changes to this manual or the product(s) described herein at any time.

Information provided in this manual is intended to be accurate and reliable. However, METALTEK assumes no responsibility for its use, or any infringements on the rights of fourth parties that may result from its use.

This manual could include unintentional technical or typographical errors. Changes are periodically made to the information herein, with the changes incorporated into new revisions of the publication.

Contents

Getting Started	5
Installing the Receiver	6
Installing the Transmitter	9
Using the FREEDOM KIT	11
Replacing the Batteries	13
PLAYMATE Consumer Connection	15
Warranty	16

Getting Started

Your new FREEDOM KIT is designed to make your PLAYMATE CHAMELEON Series ball machine wireless. Please make sure that the serial number on the FREEDOM KIT Transmitter matches the serial number found on the FREEDOM KIT Receiver to ensure that they are operating on the same Wireless frequency.



Installing the Receiver

1. Locate and remove (2) screws on the top back corner of the ball machine. These (2) screws will be replaced with the longer screws included with the FREEDOM KIT.



2. Use the long screws to secure the FREEDOM KIT Receiver to the ball machine receiver.



Installing the Receiver...

3. A black retractable cable that looks like a telephone cable was supplied with your ball machine. You will need to plug one end of that cable into the bottom of the FREEDOM KIT Receiver.

NOTE: Although this cable looks like a standard telephone cable, it is not. Only use cables supplied by PLAYMATE.



4. Plug the other end of the cable into the ball machine.



Installing the Receiver...

5. When you are done, a properly installed FREEDOM KIT Receiver will look like this:



Installing the Transmitter

1. Locate and remove the red backing on the double-sided tape on the back of the FREEDOM KIT Transmitter.



2. Carefully line up the transmitter with the lower right hand side of the remote box. Make sure that everything is lined up before applying any pressure to the transmitter as it will cause the double-sided tape to cure.



Installing the Transmitter...

3. Once you have everything lined up, apply pressure to the transmitter to squeeze it against the remote box for about 10 seconds. The tape takes about 24 hours to cure. While the tape is curing, during these first 24 hours, handle the transmitter and remote box with care as not to separate them.




4. Plug the short retractable cable into the remote box. No other cables are needed.



Using the FREEDOM KIT

To use the FREEDOM KIT, turn on the ball machine and press the black button on the FREEDOM KIT Transmitter.

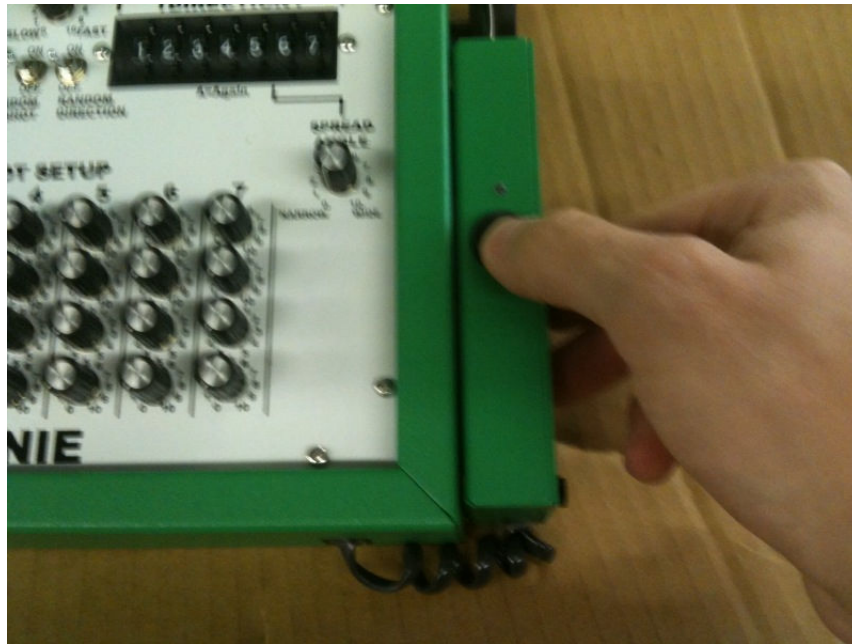

Any time you change any settings on the remote box, you need to press the black button on the FREEDOM KIT Transmitter to send the updated settings to the ball machine.

Using the FREEDOM KIT...

The FREEDOM KIT Transmitter has a light (LED) above the black button. The light indicates the following:

Solid RED – The black button is being pressed.

Flashing RED – The black button has been pressed too long. Release the black button.

Flashing YELLOW – Trying to send to ball machine.

Solid GREEN – Ball machine received information successfully.


NOTE: When the ball machine successfully receives the information the FREEDOM KIT Transmitter will sound a soft beep.

Replacing the Batteries

1. Remove the black thumbscrew on the battery door. Do NOT remove any silver screws!




2. Replace the batteries with 2 AA Energizer "LITHIUM" type batteries. Do NOT use alkaline batteries. If you can't find Energizer batteries, make sure that the batteries are of LITHIUM type.

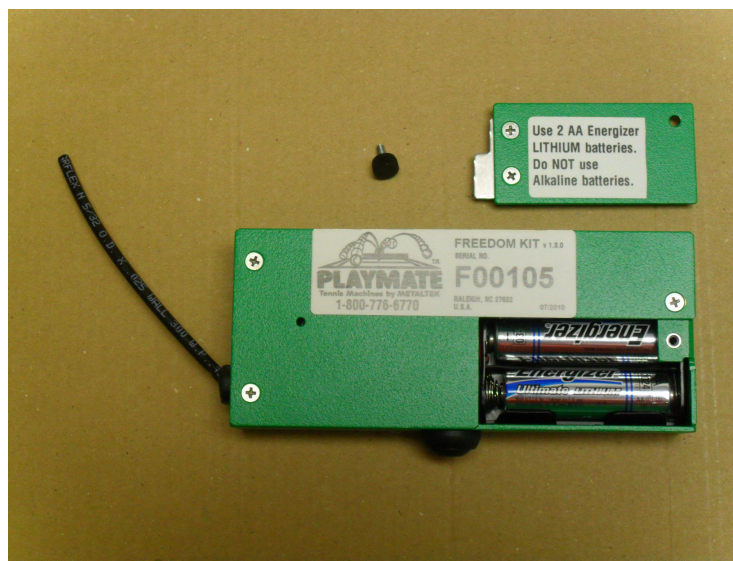

Replacing the Batteries...

3. Put the battery door back in place and carefully screw the black thumbscrew in place to secure the battery compartment.

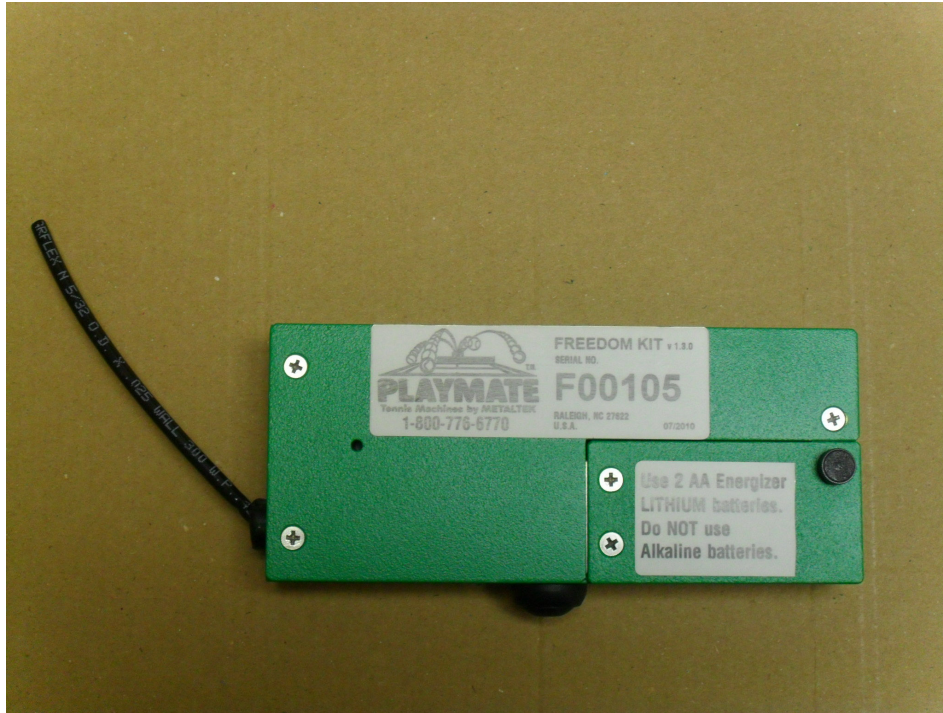

PLAYMATE Consumer Connection

We are here during business hours to help provide technical assistance to our customers.

Hours of Operation:

Monday – Friday

8:00am – 4:30pm (EST)

If you experience difficulty with your PLAYMATE product please feel free to contact us as follows:

METALTEK

455 Kitty Hawk Drive

Morrisville, NC 27560

USA

Phone: (919) 544-0344

Toll Free: 1-800-776-6770

Fax: (919) 544-1430

www.PlaymateTennis.com

 
For Parts & Accessories:

anna@metaltek.net

For Technical Support:

fred@metaltek.net

Authorized Sales & Service Center



Warranty

WARRANTY AND LIMITATION OF LIABILITY

LIMITED ONE-YEAR WARRANTY – The PLAYMATE FREEDOM KITS are warranted against defects in material and workmanship for one (1) year from the date of delivery. During the warranty period, METALTEK will repair or, at its option, replace at no charge, components that prove to be defective, provided the parts are returned, shipping prepaid, to METALTEK. This warranty does not apply to the normal wear and tear of the FREEDOM KIT or its components as received from proper use.

Neither does the warranty apply to FREEDOM KITS that are damaged during shipment – (all claims must be presented to the shipper within seven (7) days of receipt of merchandise). Nor does this warranty apply to any damage to the FREEDOM KIT caused by accident or misuse or as a result of service or modification by any persons other than those certified by METALTEK. No other express warranty is given by METALTEK.

METALTEK SHALL NOT BE LIABLE FOR CONSEQUENTIAL DAMAGES.

Warranty...

OBLIGATION TO MAKE CHANGES – Products are sold on the basis of specifications applicable at the time of sale. METALTEK shall have no obligation to modify or update products once sold.

METALTEK'S PLANT:
455 Kitty Hawk Drive
Morrisville, NC 27560 USA
1-800-776-6770

REPAIR TIME – Parts are normally repaired and returned within five (5) working days once received at METALTEK'S plant.

SHIPPING INSTRUCTIONS – Parts should be returned in a protective package to avoid in-transit damage. Such damage is not covered by warranty. Shipments should always be insured!

SHIPPING CHARGES – Whether the FREEDOM KIT is in warranty or out of warranty, the customer should prepay shipment to METALTEK.

FURTHER INFORMATION – Service contracts are not available. FREEDOM KIT circuitry and design are proprietary to METALTEK and service manuals are not available to customers. Should other problems or questions arise regarding repairs, please call METALTEK.

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.